



FDHC6-1 Registre anti-retour pour les foyers Delta, Onyx et Opel

Le registre anti-retour empêche l'air chaud de circuler dans les conduits d'air chaud lorsque le ventilateur de chauffage central ne fonctionne pas.

MISE EN GARDE: Ne pas installer un registre anti-retour sans le relier à des conduits d'air chaud adéquat.

INSTALLATION

1. Sur le dessus du foyer, enlevez le couvercle extérieur sur la gauche de la cheminée. Coupez l'isolant à la grandeur de l'ouverture, enlevez-le, puis retirez le couvercle du fond (il est retenu en place par du ruban adhésif).

NOTE: Le foyer ne fonctionnera pas correctement si le registre anti-retour est installé sur le côté droit de l'unité.

2. Pour un foyer Opel, pliez les quatre pattes situés au bas du registre (voir figure 1). Pour les autres foyers, pliez les quatre pattes situés au haut du registre (voir figure 1).
3. Installez le registre anti-retour en insérant l'extrémité droite du registre à travers le dessus du foyer. Poussez bien au fond, jusqu'à ce que le registre repose sur les pattes repliées.
4. Vissez chaque patte sur le dessus du foyer.



FDHC6-1 Backdraft Damper Kit for Delta, Onyx and Opel

The backdraft damper prevents hot air from travelling into the single wall ducting unless the central heat blower is operating.


WARNING: Do not install a backdraft damper without connecting it to appropriate central heat ductwork.

INSTALLATION

1. On the top of the fireplace, remove the outer cover to the left of the flue outlet. Cut the insulation to the size of the opening, remove it and then remove the cover plate underneath (it is taped in place).

NOTE: Your fireplace will not function properly if the damper is installed on the right side opening.

2. For an Opel fireplace, bend the four tabs located closer to the straight end (see Figure 1). For any other fireplace, bend the four tabs that are closer to the crimped end (see Figure 1).
3. Install the backdraft damper by inserting the straight end through the top of the fireplace. Push down the backdraft damper all the way to the bent tabs.
4. Screw each tab securely to the top of the fireplace.

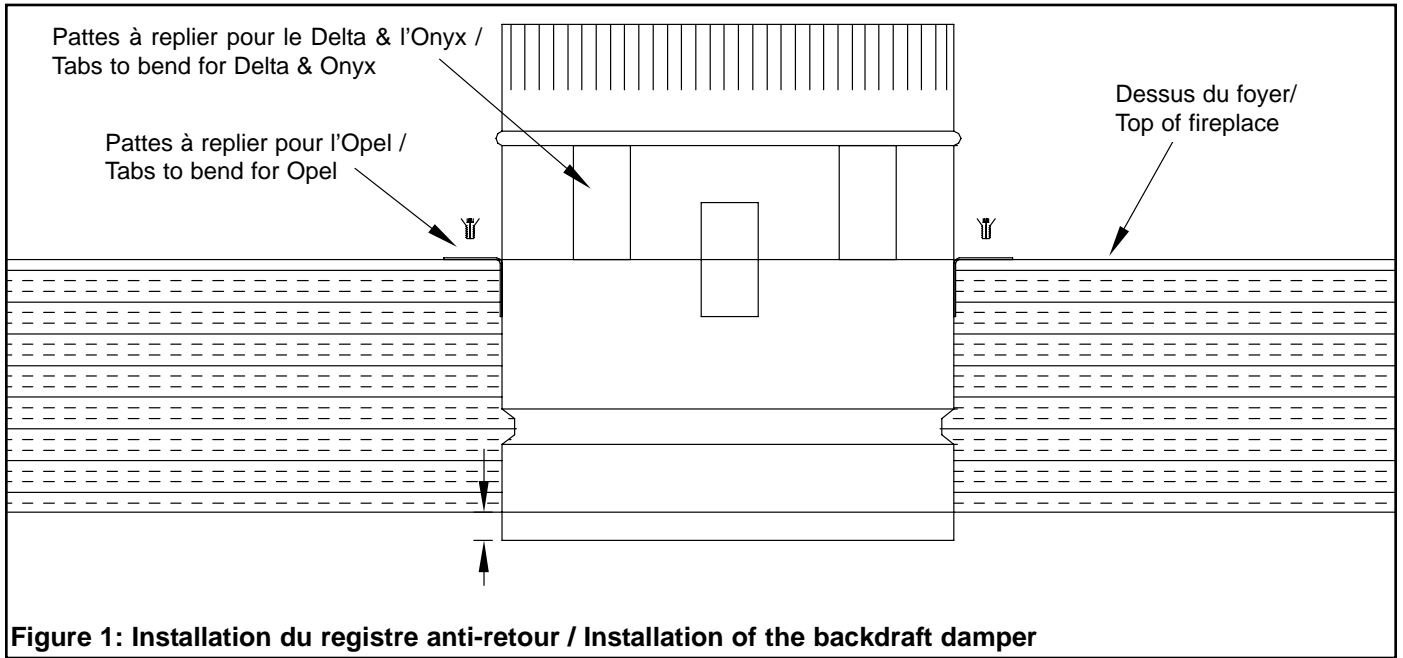

Liste de contrôle / Check List:

- 1 Registre anti-retour / Backdraft Damper (13.HC61.1.DNPR)
- Notice d'installation et liste de contrôle / Instruction and check list

INITIALES
INITIALS